




CONFIGURATION

BEFORE YOU BEGIN

Pelmets are only mounted face fix.

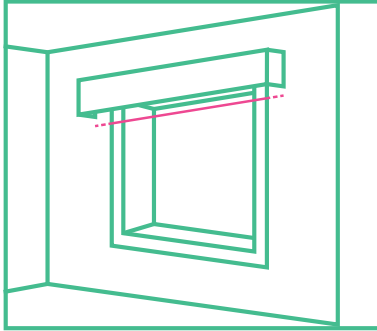

First measure the outside of the architrave from left to right.

Add 60-150mm each side of the window, depending on how much you would like the pelmet to go over the wall.

As easy as that!



Scan the QR code
for video instructions

