




## CONFIGURATION

### BEFORE YOU BEGIN

A key step before you start measuring is whether you would like your blinds inside the window frames (known as recess fit) or outside (known as face fit). Recess fit needs a minimum 50mm depth, 70mm is recommended.

### ROLL TYPE

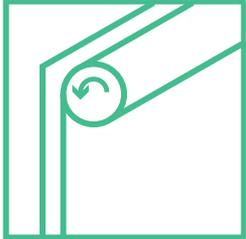

#### UNDER ROLL


- Less light leakage & more privacy
- Blind roll and backing is visible
- Recommended for face fit




#### OVER ROLL

- Clears obstructions
- Covers tubing

### FIT TYPE

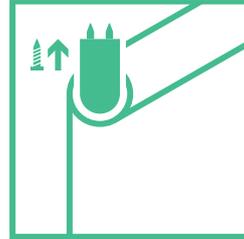


#### RECESS FIT

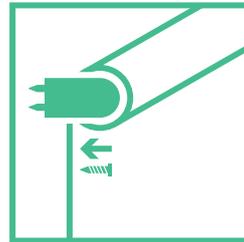

#### FACE FIT

## MEASURE - FACE FIT


TICK IF FACE FIT

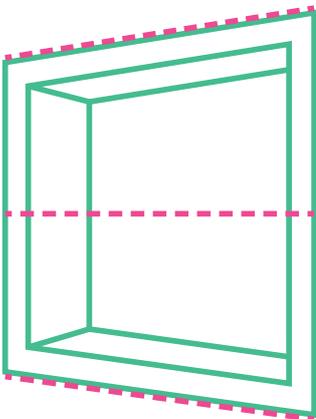

### MEASURING THE WIDTH

Measure the exact outside width of architrave in three different positions- the top, middle and bottom. Take the largest measurement.

*If window has no architraves add 50mm each side*

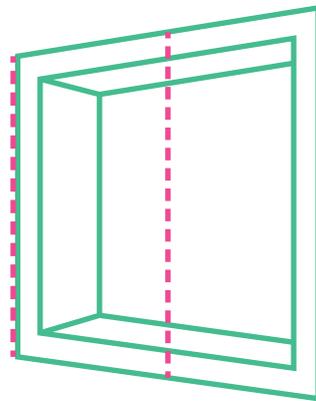

### MEASURING THE DROP

Measure the exact outside height of architrave in three different positions- the left, middle and right. Take the largest measurement.


*If window has no architraves add 80mm*





## MEASURE - RECESS FIT


TICK IF RECESS FIT

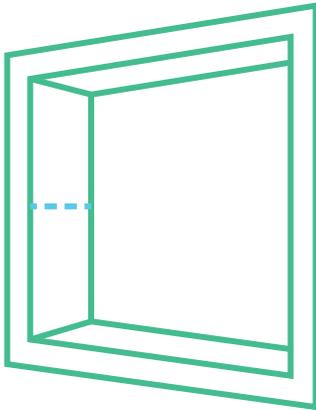

### MEASURING THE DEPTH

Before selecting recess fit, make sure you have a minimum of 50mm in depth.


*However, 70mm is recommended.*

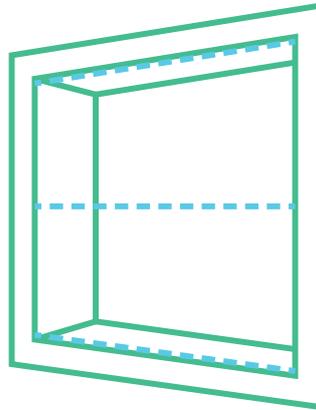

### MEASURING THE WIDTH

Measure the exact inside width in three different positions - the top, middle & bottom (do not make deductions).

*Take the smallest measurement.*

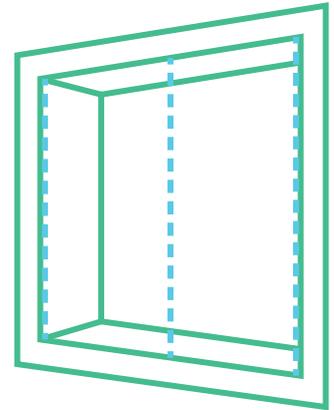

### MEASURING THE DROP


Measure the exact inside recess height from the top to the bottom of the windowsill in three positions - the left, middle, & right.

*Take the smallest measurement.*

## TAKE YOUR MEASUREMENTS

READ THE INSTRUCTIONS BEFORE MEASURING

<b>FACE FIT</b>	<b>RECESS FIT</b>
DROP	DROP
<input type="text"/>	<input type="text"/>
WIDTH	WIDTH
<input type="text"/>	<input type="text"/>

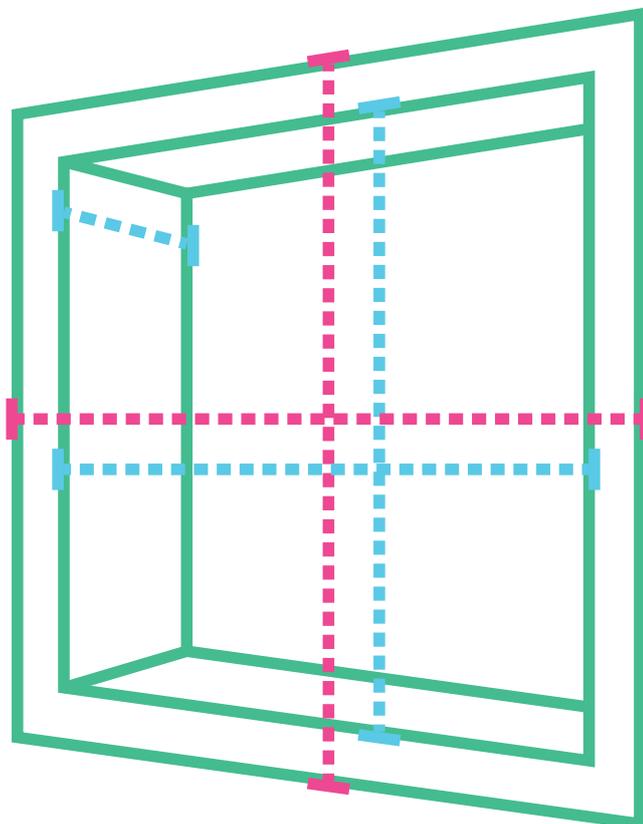

Scan the QR code for video instructions

