




CONFIGURATION

BEFORE YOU BEGIN

It is important to note that Roman Blinds can only be face fitted.


MEASURING

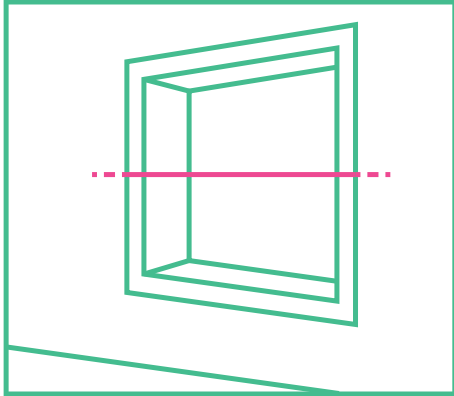

MEASURING THE WIDTH

Measure the exact width of architrave.

We recommend adding 50-100mm to each side of the architrave.

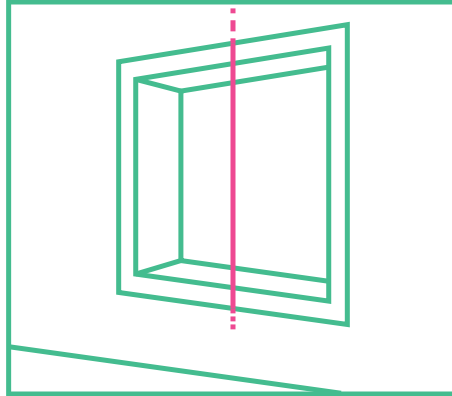


MEASURING THE DROP

Measure the drop from the top of architrave to where you would like the blind to finish.

We recommend adding 150-200mm to the top of your measurement.

FINISH AT THE SILL

We recommend measuring 60-100mm past the sill.

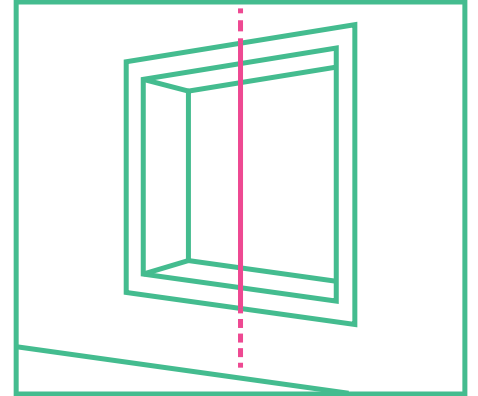

FINISH TO THE FLOOR

We recommend measuring 30mm above the floor.

TAKE YOUR MEASUREMENTS

READ THE INSTRUCTIONS BEFORE MEASURING

FACE FIT

DROP

WIDTH



Scan the QR code for video instructions

