




CONFIGURATION


BEFORE YOU BEGIN

A key step before you start measuring is whether you would like your blinds inside the window frames (known as recess fit) or outside (known as face fit).

FACE FIT

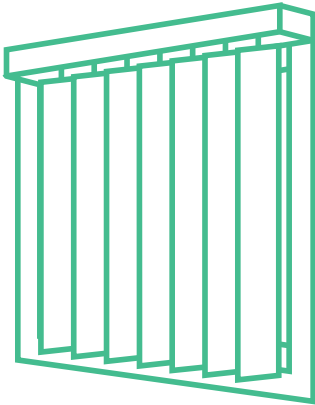


RECESS FIT

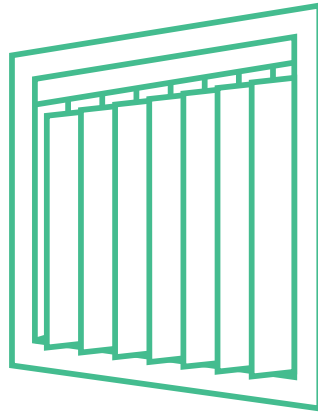

MEASURE - FACE FIT


TICK IF FACE FIT

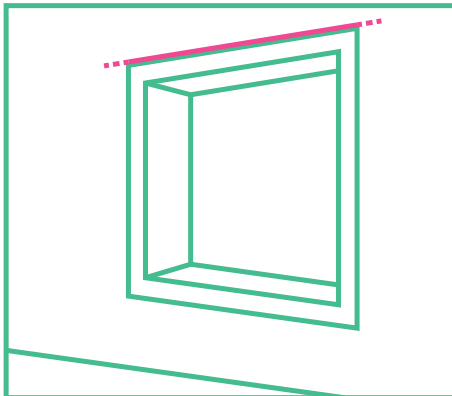

MEASURING THE WIDTH

Measure the exact width of architrave.

Add 50-100mm on both sides.

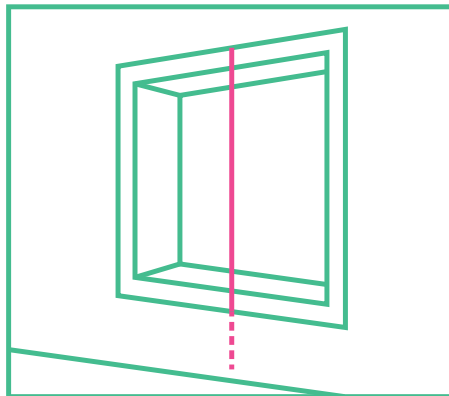


MEASURING THE DROP

Measure the drop from the top of architrave to where you would like the blind to finish.

FINISH TO THE FLOOR

We recommend measuring 10mm above the floor.

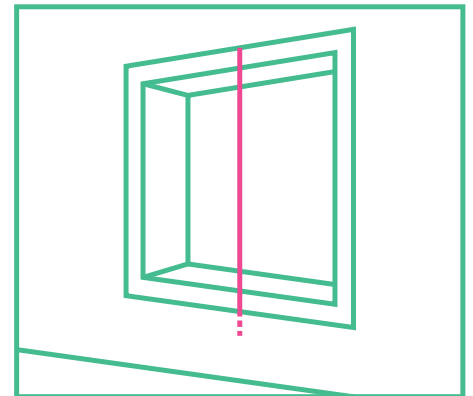

FINISH ABOVE THE FLOOR

We recommend measuring 50-100mm past the sill.





MEASURE - RECESS FIT


TICK IF RECESS FIT

BEFORE YOU BEGIN

There is a minimum depth requirement for vertical blinds.


- 135mm of depth for a 127mm slat
- 100mm depth for 89mm slats

If you do not have enough depth, we advise for face fit.

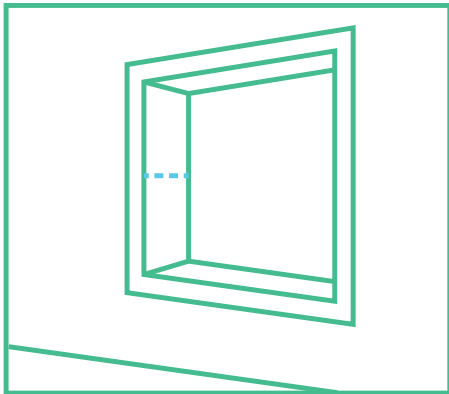

MEASURING THE DEPTH


Before selecting recess fit, make sure you have the minimum depths for your blind type.

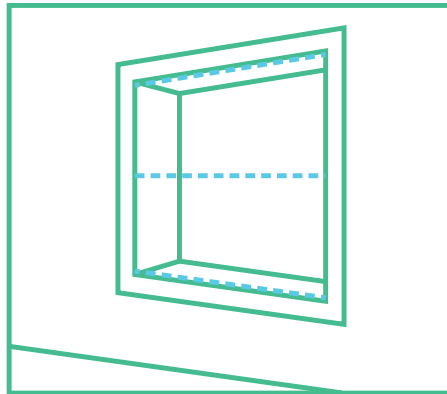

MEASURING THE WIDTH

Measure the exact inside width in three different positions - the top, middle & bottom (do not make deductions).

Take the smallest measurement.

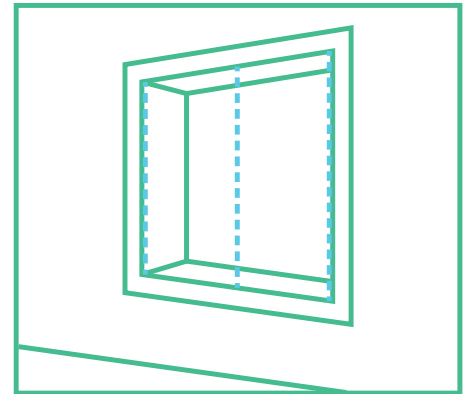

MEASURING THE DROP


Measure the exact inside recess height from the top to the bottom of the windowsill in three positions - the left, middle, & right.

Take the smallest measurement.

TAKE YOUR MEASUREMENTS

READ THE INSTRUCTIONS BEFORE MEASURING

FACE FIT	RECESS FIT
DROP	DROP
<input type="text"/>	<input type="text"/>
WIDTH	WIDTH
<input type="text"/>	<input type="text"/>

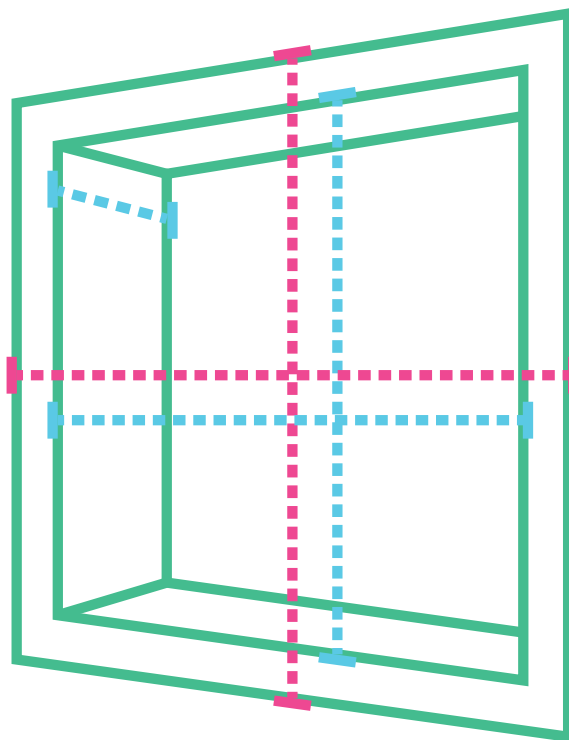

Scan the QR code for video instructions

